

WEB-485

FARMCONNECT WEB INTERFACE



Table of contents

1	General introduction	1
1.1	Symbols and definitions	1
1.2	Customer service	1
2	Safety instructions and warnings.....	2
2.1	Sound, independent alarm system.....	2
2.2	During use.....	2
2.3	Disposal.....	2
3	Display and keyboard.....	3
3.1	Display	3
3.2	Keyboard.....	3
4	Access code.....	4
5	Status	5
6	Alarm.....	6
6.1	Alarm status.....	6
6.2	Last alarm	7
6.3	WEB-485 alarm.....	7
6.4	Communication	7
6.5	Alarm codes	8
7	System.....	9
7.1	General	9
7.2	Date/Time.....	9
7.3	Display	10
7.4	Remote control.....	10

Copyright

No part of this publication may be copied and/or published by photocopying or any other means whatsoever, without prior written permission from Stienen BE (www.stienen.com). We do not accept any liability for the contents of this manual and explicitly waive all implicit guarantees of merchantability or fitness for a certain use. We also reserve the right to improve or change this manual without being under the obligation to inform any person or organisation accordingly. You cannot hold us liable for any damage, loss or injury resulting from improper use or from use not in accordance with the instructions in this manual.

Copyright © 2023 Stienen Bedrijfselektronica B.V.

1 General introduction

The manual is intended for the user of this device. It contains all the information necessary for operating and cleaning this product. Please read all information and instructions carefully before using the product.

Symbols mark warnings, important notes, tips, etc. in this manual.

Stienen has compiled this manual with all due care. If you find any errors, please let us know.

1.1 Symbols and definitions



Risk of injury by dangerous electric shock. Danger to people and animals.



Warning indicating danger to product, people and animals if procedures are not strictly complied with.



Warning indicating damage to products if procedures are not strictly complied with.



Pressure cleaning is not allowed.



Collect as separate flows



Important note



Additional information



Example of a concrete application of the functionality described.



Example calculation



Manual control



Tips and advice



Screenshot



Application note

1.2 Customer service

If you have any questions, please contact your installer. Be sure to have all the necessary data handy. You should also always write down the cause of a fault and the circumstances that occurred during the fault. This will enable you to avoid any ambiguities and it will enable your installer to deal with any faults quickly and effectively.

2 Safety instructions and warnings

Read the general safety instructions in this chapter carefully before using the device. A certified installer must install the device and resolve any faults, in accordance with the applicable guidelines. If this product is installed and used in any other way, the warranty will not apply.

2.1 Sound, independent alarm system

Although we have designed and built our control equipment with the greatest care possible, technical faults can never be ruled out. Insurance requirements in many countries are becoming increasingly stringent. This requires the alarm contacts of the various control computers to be connected a central alarm unit.



We recommend also installing a sound independent alarm system, for example a min/max thermostat.



We advise you to manually test the alarm at least once a week.

2.2 During use

The people who operate the device have read the manual carefully. They are aware of potential hazards that may arise from improper use and maintenance of the product.



The device must only be opened by authorised personnel.



Do not switch off the control computer while the house is empty, but switch it to *Off* mode. This will prevent condensation caused by the equipment cooling down.



Check the device for any damage at regular intervals. A damaged device is unsafe. Always report any damage to your installer.



Electronic equipment is splash-proof and must not be cleaned using a pressure cleaner.



If any emergency has occurred, write down: the circumstances under which the emergency occurred, installation settings, software date, software version number and possible causes.

2.3 Disposal


The EU has set up systems for the separate collection of waste electrical and electronic equipment and batteries (Directive 2012/19/EU). If you do not dispose of the device properly, you risk a fine.







Electrical and electronic equipment must be collected separately at the end of its life.

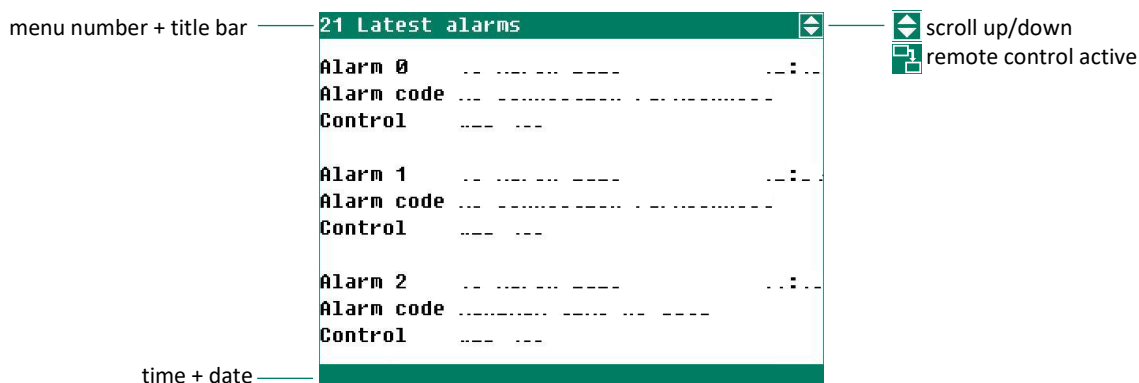
3 Display and keyboard

3.1 Display




 If the last lines of text fall outside the display, you will see  in the title bar.
Using  , you can then go to the remaining settings/measurements.

3.2 Keyboard

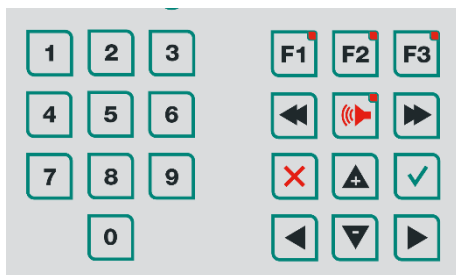

Each time a key is pressed, the display lights up for a few seconds. In a dark house, settings and measurements are then easily visible.

 Operate the keys with your fingertips and do not use sharp objects, e.g. a pen or screwdriver.

Press and



Shortcut key for alarm screen.



Key for cancelling changes or menu selections.
Press and hold to select the main menu.





Move cursor left or right.
Press and hold to move to the first or last cursor position.




Move cursor or change value.



Confirm menu selection, start change and confirm change.

- After selecting the value to be changed, the cursor is visible as a green rectangle: .
- While editing, the cursor changes to a black border, for example: .

4 Access code

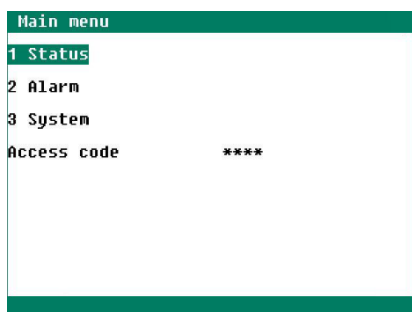

If you use an access code, you should write it down and keep it in a safe place. You cannot change settings without an access code.

The access code remains active until the overview screen is selected. After that, you need to re-enter it to be able to change a setting.

Access code You can set a 4-digit access code to prevent unauthorised persons from changing settings. Your installer can create up to six access codes for you.

5 Status

1 Status		
IP address	-----	
Subnet Mask	-----	
Default Gateway	-----	
MAC address	-----	
System up time	- days	--:--
Connection up time	days	--:--
Total connections FarmConnect		-
Connection ethernet		yes
Connection FarmConnect		no
FarmConnect messages received		-
FarmConnect messages sent		-

<i>IP address</i>	The unique internet protocol address (IP address) is assigned to each device in a network that uses the internet protocol for communication. If zeros remain on this line after plugging in the Ethernet cable, the WEB-485 does not have access to a functioning network.
<i>Subnet Mask</i>	This mask unique to each device is automatically configured using the Dynamic Host Configuration Protocol (DHCP).
<i>Default Gateway</i>	The node in a computer network that uses the Internet Protocol Suite and serves as a 'router' to other networks when no other route specification matches the destination IP address of a data packet.
<i>MAC address</i>	The <i>Media Access Control address</i> is a unique identification number to identify the <i>WEB-485</i> in the communication network.
<i>System up time</i>	The amount of time (days and hh:mm:ss) that the <i>WEB-485</i> has been active since the last reset (or power failure).
<i>Connection up time</i>	The amount of time (days and hh:mm:ss) of the current connection to <i>FarmConnect</i> since the last reset (or power failure) of the <i>WEB-485</i> .
<i>Total connections FarmConnect</i>	The total number of successful connections to <i>FarmConnect</i> since the last reset (or power failure) of the <i>WEB-485</i> .
<i>Connection ethernet</i>	Here you can see whether the <i>WEB-485</i> is currently connected to Ethernet.
<i>Connection FarmConnect</i>	Here you can see whether the <i>WEB-485</i> is currently connected to the <i>FarmConnect</i> server.
<i>FarmConnect messages received</i>	The total number of messages received from the <i>FarmConnect</i> server.
<i>FarmConnect messages sent</i>	The total number of messages sent to the <i>FarmConnect</i> server.


6 Alarm

6.1 Alarm status

2 Alarm status	
Main alarm	on
🕒 off	no
Test	no
Alarm code	No alarm
Control	
Alarm external house	
1 Latest alarms	
2 Alarm WEB-485	
3 Communication	

Main alarm

Here you can turn the main alarm on and off. If the main alarm is off, the LED blinks regularly. No more alarms are issued.

 Installation errors cannot be disabled.

Test

Set *Test* to *yes* to test the alarm relay (siren) for 10 seconds.
Set *Test* to *no* to clear the alarm test time.

🕒 off

Temporarily disable alarm

Option for temporarily disabling the alarm (siren). This does not apply to the hardware alarms; they cannot be switched off temporarily. The main alarm is switched off for 30 minutes; the LED will blink irregularly. The main alarm is switched on automatically again after 30 minutes. The alarm relay will de-energize again, causing an alarm, if the cause of the alarm has not been removed.
You can clear the alarm setting time by setting 🕒 off to *no*.

Alarm code

See page 8.

Terminal

The number of the terminal, to which the alarm relates.


Alarm external house

If a message is received via the communication loop (*WEB-485 = master device*), that the alarm relay of a connected controller has de-energized, the corresponding house number is displayed here.



Remember to turn the alarm back *on* after it is switched off for troubleshooting. Preferably use the 🕒 off function to clear a fault.

6.2 Last alarm

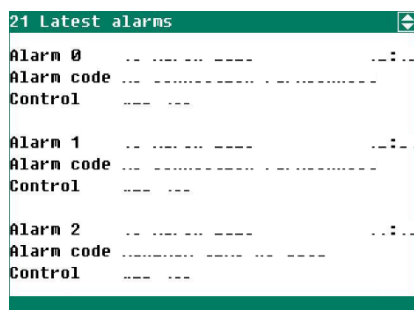

Alarm 0 The cause of the *most recent alarm*, in addition to the time until which the alarm has been/was active. Press the down arrow key to display the data of the previous alarms.

6.3 WEB-485 alarm



Sample setting on external device:
FarmConnect interval = 10 minutes by default




Do not change the default setting to avoid unnecessary alarms.

Time no data Enter the amount of time (hh:mm), after which the *WEB-485* should raise an alarm if no data transfer between *WEB-485* and *FarmConnect* has taken place during this time. Default = 01:15 (75 minutes).

Interval FarmConnect 60 minutes is the longest interval time that the installer can set on the devices connected. Ask your installer what time he has set. Then enter a time, which is equal to or higher than the time entered by the installer on the connected devices.

6.4 Communication

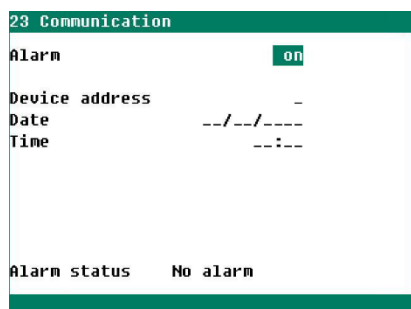

Here you can enable and disable the communication alarm. This screen appears only at a master device. *Device address* shows the address, from which the master device did not receive any data.

6.5 Alarm codes

Alarm code	Description
<i>Alarm external house</i>	See page 6.
<i>Communication</i>	The master device has not received any data from the displayed device address.
<i>No addresses in loop</i>	For <i>Device</i> , the number of addresses in the loop has not been filled in.
<i>No communication address</i>	Device address WEB-485 missing.
<i>No Ethernet connection</i>	Ethernet connection missing: router is off or loop interrupted.
<i>No valid IP address</i>	The assigned IP address is invalid.
<i>No connection to FC</i>	Invalid connection key. The connection to <i>FarmConnect</i> has been interrupted.
<i>Main station inactive</i>	No (info) messages are received (RS485 communication loop) by the <i>WEB-485</i> .
<i>Maximum time no data</i>	There is a connection to <i>FarmConnect</i> but no data transfer between <i>WEB-485</i> and <i>FarmConnect</i> has taken place during the time entered.
<i>Module 0 does not respond</i>	Module address 0 does not exist. Check hardware.

7 System

7.1 General



```
3 System
Device          WEB-485
Type            178
Software version -----
Software date   --/--/----
ENG, NLD, DEU, FRA,
RUS, ESP, ZHO   English
1 Date/Time
2 Display
3 Remote control
```

Device Device name. In this example *WEB-485*.

Type Type number of the device: *WEB-485* = 178.

Programme version The version of the software in the WEB-485.


Programme date The date of software.

ENG, NLD, DEU, Set the language in which the texts should appear in the menu:
ENG=English, NLD=Dutch, DEU=German etc.



Shortcut keys for changing language: press and hold **F1** and use **◀** **▶** to select previous/next language.

7.2 Date/Time

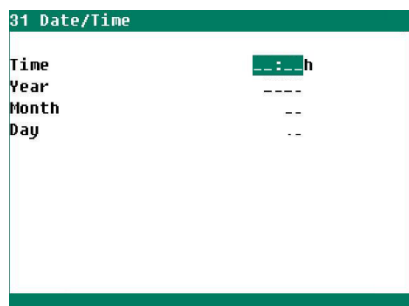

```
31 Date/Time
Time          --:--h
Year          ----
Month         --
Day           --
```

This screen allows you to set the current date and time.

7.3 Display

```
32 Display
Brightness
  on      100%
  off     015%
  On-time 300s
Cursor left      yes
```

<i>Brightness</i>	<i>on</i>	Brightness setting of the display in operation mode.
	<i>off</i>	Brightness setting of the display in sleep mode.
	<i>On-time</i>	Number of seconds the backlight illuminates after the last time a key is pressed. 0 seconds = backlight does not switch off.
<i>Cursor left</i>	<i>yes</i>	Place cursor on the far left digit when you start making changes.
	<i>no</i>	Place cursor on the far right digit when you start making changes.

7.4 Remote control

```

33 Remote control

Disclaimer
Manufacturer accepts no responsibility
for damage when using Remote Control.
You need to provide a secure
LAN environment shielded from the
internet through a firewall.

Remote control      yes
User                .....
Access code         .....
IP address          .....

```



*A*Note-Remote-N-ENxxxxxx